 


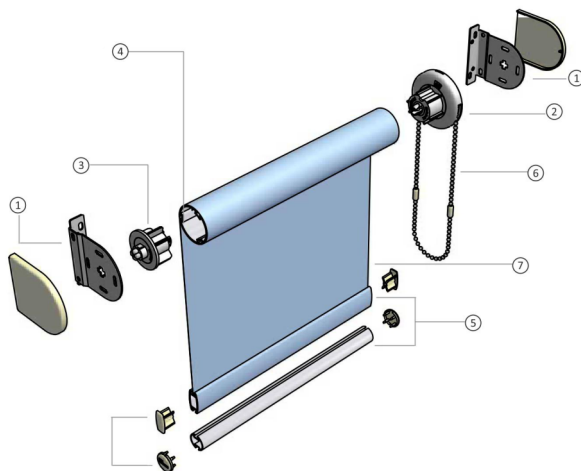

1. Bracket
2. Mechanism
3. Plunger end

4. Tube
5. Hem bar
6. Ball chain

7. Fabric

Infinity roller is compatible with most types of windows, but is particularly suitable for standard size windows. An assisting spring mechanism can be installed to allow the control of standard blinds. The spring can also be attached to blinds that allow frail and infirm people to operate the blind without excessive power being used.


The brackets are equipped with a unique securing pin to ensure that the blind does not fall down by using excessive force controlling the ball chain to ensure safety and proper mounting.

Both parts and structures are tested for reliability and strength over a period of more than one year.


Back bar mounting plate/brackets

The mounting plate comes in finish or galvanized steel enameled stove. The brackets for mounting. Due to the easy, simple and fast installation of the bracket design, the light gap between the blind and the recess is minimized.

Back bar mounting plate/brackets

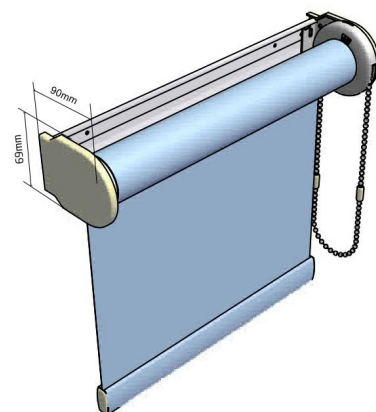

Edge clearance


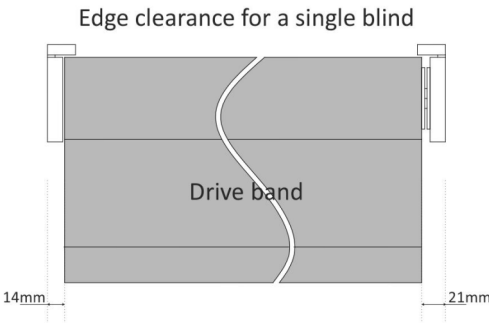


Maximum Recommended Blind Size

System	Fabric Group	Blind Width (metres)				
		0.50	1.00	1.50	2.00	2.50
Infinity	up to 200 g/m sq	6.00	6.00	6.00	6.00	6.00
	200 > 320 g/m sq	4.75	4.75	4.75	4.75	4.75
	320 > 485 g/m sq	6.00	6.00	6.00	5.00	4.00

Maximum Blind Drop (metre)

Bracket Fix

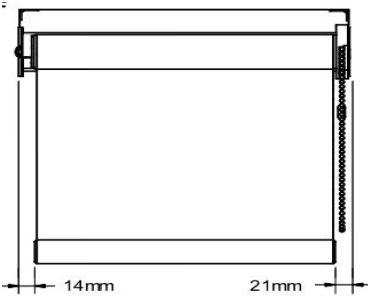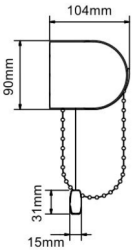

- Infinity Standard metal bracket face fix

- Infinity Standard metal bracket front view

